

HOW GATEVO CONNECT WORKS

From installation to a visitor walking through the gate - four steps, and three ways the owner can grant access, all managed from the cloud.



INSTALL

GatEvo Connect wires into the existing gate, barrier or door control board — six fail-safe relay outputs for motors, locks and lighting, plus four monitored safety inputs for beams and edges.



CONNECT

The controller joins GatEvo's cloud over Ethernet, Wi-Fi or Bluetooth 5 LE. If the internet drops, it keeps working locally over Bluetooth or LAN — the gate is never stranded.



GRANT ACCESS

The owner decides who gets in and how — a shareable Access Link, a Call-to-Open number, or automatic Arrival Detection for regular users. Every grant can be time-limited, logged and revoked instantly.



ENTRY


The relevant relay fires the moment access is confirmed, and the gate, barrier or door opens — nothing exposed outside for the visitor to touch, carry or lose.

THREE WAYS TO GRANT ACCESS




ACCESS LINK

A shareable link with a one-time or time-limited code. Visitor taps it, enters the code — no app or account needed.

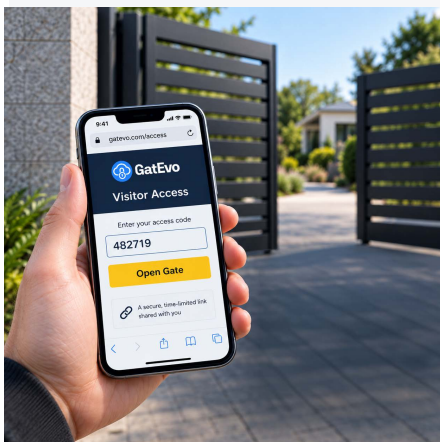


CALL-TO-OPEN

Each gate gets a dedicated number. A recognised caller unlocks it instantly — no app, no codes.

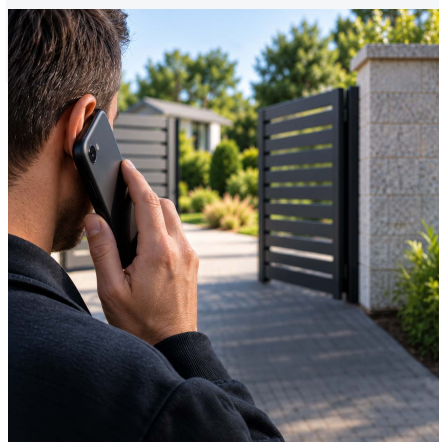

ARRIVAL DETECTION

GPS plus Bluetooth recognise a regular user approaching and open automatically — nothing to tap at all.

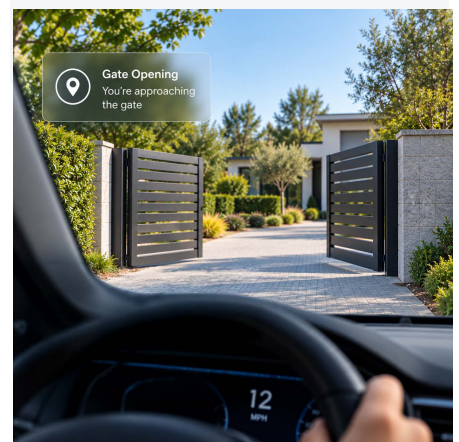

DISTRIBUTED BY ASD

Ask your ASD account manager about adding GatEvo Connect to your next gate automation quote.

sales@asdltd.ie

+353 (0) 4734550 · www.asdltd.ie